


## PLAN SIDEWALK AWAY FROM CURB

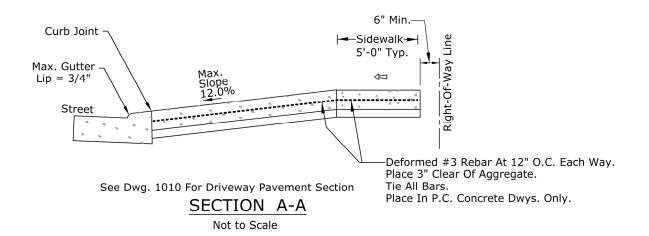

## LEGEND:

Slope 1.5% Max Design Slope 2% Max Finish Grade

## NOTES: COMMERCIAL DRIVEWAYS

- 1) Use Oregon Commercial Grade Concrete Per Section 00440.
- 2) Trowel Curb Joints With A Minimum 1/4" Radius Along Back Of Curb.
- 3) Place 3/8" Premolded Asphalt Impregnated Material Or Equal. Expansion Joints Extend From Subgrade To Finish Grade. Provide At Cold Joints, End Of Driveways And Each Side Of Inlet Structures.
- 4) Space Contraction Joints At A Max. Of 10'.
- 5) Design Slopes May Be Exceeded To Fit Existing Conditions, Not to Exceed Finish Grade Slope.



COMMERCIAL DRIVEWAY APPROACH (WITH PLANTER STRIP)

PLOT STAMP: 06/01/22 4:40P ANTHONYD

CAD: 1040.DWG

EFFECTIVE DATE:

06/01/2022

WASH. CO. #

1040